

energenie

GREEN ENERGY FOR OUR PLANET



**EG-PMS-WLAN PROGRAMMABLE POWER OUTLET
STRIP WITH WLAN INTERFACE**

**USER MANUAL
HANDBUCH
HANDLEIDING
MANUEL DESCRIPTIF
РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ
КЕРІВНИЦТВО КОРИСТУВАЧА**

**Programmable surge protector with WLAN
interface**



**Programmier- und steuerbare Steckdosenleiste
mit WLAN-Anschluss**



**Programmeerbare power outlet strip met WLAN
interface**



**Boîtier commandé à distance et programmable
avec prise WLAN**



**Программируемый фильтр питания с
интерфейсом к беспроводной компьютерной
сети**



**Програмований мережевий фільтр з WLAN
ынтерфейсом.**



1. Introduction

Congratulations with your purchase of this *Programmable LAN Surge protector*. Your EG-PMS-WLAN is an advanced surge protector with power management features. Four sockets are individually manageable via the LAN interface.

The sockets can be switched on/off by a timer schedule, by user or different events. It is also possible to pre-program the unit event timer schedule (hardware schedule) and then disconnect EG-PMS-WLAN from WLAN and use it elsewhere. The device can be used as an advanced standby-killer.

With your free personal user account at EnerGenie.com you can manage your EG-PMS-WLAN via the Internet from all over the world, even from your Smartphone.

1.1. Features

- The main rocker switch enables switching all the sockets on and off
- In addition to it every manageable socket can be switched on and off via the software control window or web browser
- The unit can be pre-programmed via hardware-based schedule. The hardware schedule will work even when the managing computer is switched off

- The unit will keep performing the programmed hardware time schedule even after EG-PMS-WLAN is disconnected from the power for some time
- The manageable sockets can then be switched on and off by the schedule, simple typical applications could be: “switch my peripherals on every working day at 8:50 AM” etc
- The manageable sockets can also be programmed with *Power Manager* software to react whenever a certain event occurs (Windows or other programs start-up/shutdown), simple typical applications could be: “switch my scanner on when I want to scan” or “switch my printer off whenever I exit Windows”
- WLAN interface: the unit can be assigned an IP address and/or a network name as a shared WLAN resource and can be afterwards accessed and managed from anywhere within the local area network or Internet
- Built-in web-server: EG-PMS-WLAN can be managed from any computer running Internet Explorer or any other web browser – therefore a global access is possible
- No external IP-address at home? Create your own user account at EnerGenie.com to manage your EG-PMS-WLAN via the Internet with any PC or smartphone. Switching on your coffee machine before setting off for home becomes a reality.
- IP-filter and 64-bit password protected encryption of data guarantee secure access to EG-PMS-WLAN

- Real time *Voltage monitor* provides information about the *actual* status of each manageable socket (on or off). This information can be further utilized in various ways (e.g. to check the proper execution of the switching commands)

1.2. Specifications

- Input voltage: 220 – 230 VAC, 50 – 60 Hz
- Maximum load: 10 A
- Maximum power consumed by EG-PMS-WLAN: 3.5 W
- Built in power supply and battery
- Wireless LAN: IEEE 802.11 b/g
- Hardware schedule possibilities:
 - Maximum number of independent hardware schedule events – 16 per socket
 - Time interval between the events – from 1 minute to 180 days
 - Timer accuracy: no more than 2 seconds error per day providing power is always present. Otherwise there can be an additional (up to 2 seconds) error per each power off. There is no accumulation of errors at all if *NTP correction* option is set (see section 5.4)
- Working temperature range: from 0 to +40 °C
- Dimensions: 378 x 98 x 55 mm
- Net weight: 0.9 kg

1.3. Hardware requirements


- Local area network with WLAN access point
- Any Internet-enabled computer connected to the local area network
- Computer running Windows® 2000/XP/Vista or Windows 7 is required for using the *Power Manager* software (use of this software is not compulsory)

1.4. Package contents

- EG-PMS-WLAN
- User manual and Quick installation guide
- USB configuration cable
- WLAN antenna
- CD with *Power Manager* software for Windows


2. Indicators and controls of the EG-PMS-WLAN

Figure #1

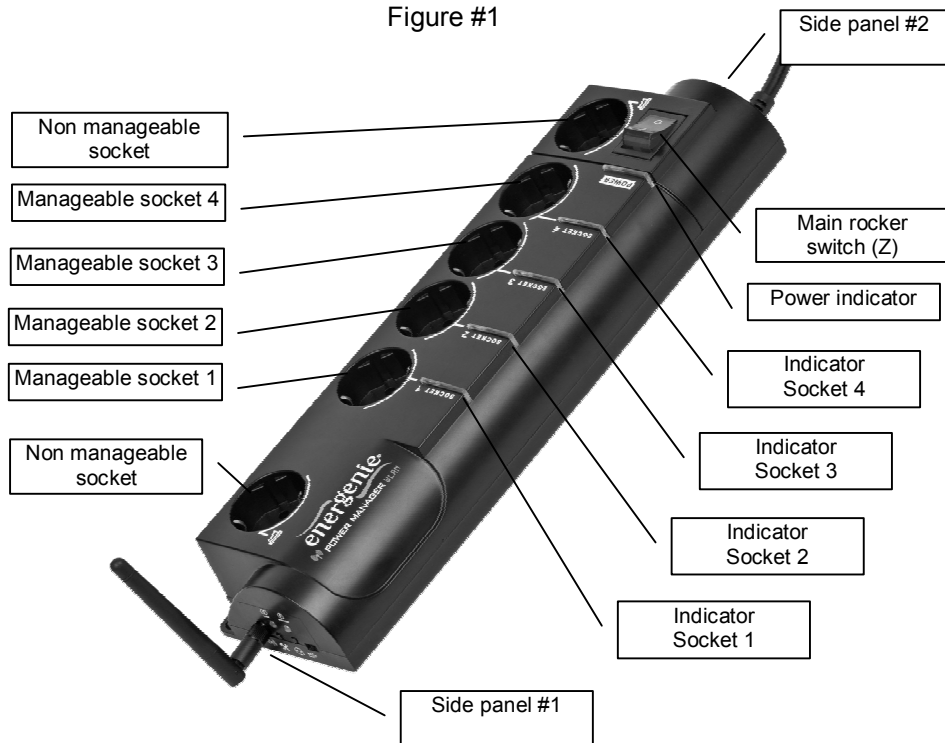


2.1. Side panel #1

Figure #2

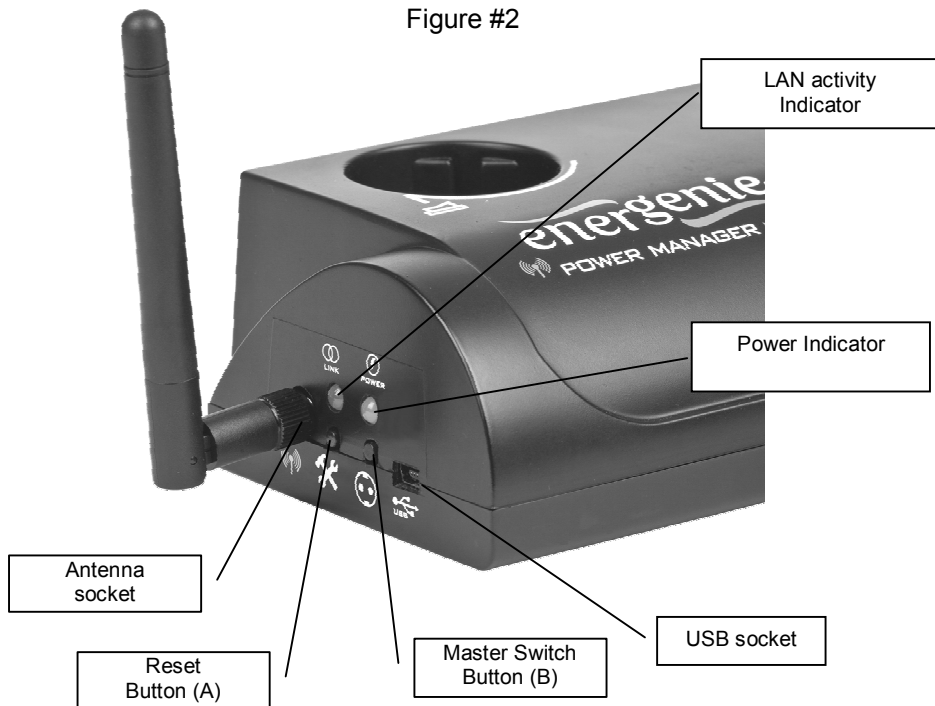


2.2. Side panel #2

Figure #3

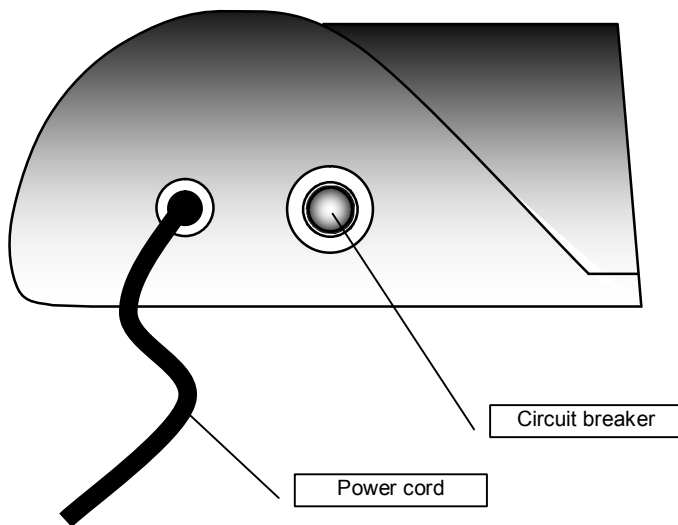


2.3. Indicators

- *Main rocker switch Z* (Figure #1) is lit – this means that EG-PMS-WLAN is connected to the power supply and active
- *Power indicator* (Figure #1) is lit – this means that the non-manageable sockets (marked with the sign ) are switched on
- The indicator *Socket 1 (2,3,4)* (Figure #1) is lit – this means that this particular socket is switched on
- The indicator *LAN activity* (Figure #2) blinks green – this means that there is some LAN activity taking place

3. Installation

- It is strongly recommended to avoid damp or wet places for installation.
- EG-PMS-WLAN should be connected to the European AC wall socket of the standard DIN 49 440.

3.1. Getting started

- Connect EG-PMS-WLAN to the wall socket first and then to the LAN socket (or your computer LAN card) with the provided patch cord or vice-versa.
- EG-PMS-WLAN can now be switched on and off by means of the *Main rocker switch (Z)*.
- Two (the first and the last) sockets of EG-PMS-WLAN are marked with the symbol . These two sockets are switched on and off by means of the *Main rocker switch (Z)* and cannot be managed by the computer – so they are called *non-manageable sockets* in this manual.
- If EG-PMS-WLAN is switched on then the red indicator *POWER* is lit. In this case both non-manageable sockets are now *live* and connected to the power supply.

- The sockets: Socket 1, Socket 2, Socket 3 and Socket 4 can be managed or pre-programmed by computer via LAN. They are called *manageable sockets* in this manual.
- The manageable sockets of EG-PMS-WLAN can be programmed to be on or off. The current status of each manageable socket is represented by the corresponding indicator which will be lit if socket has power to it.
- If the *Main rocker switch* (Z) (Figure #1) is turned off then the manageable sockets cannot be switched on by either web server, *Power manager* software or the hardware schedule.
- As soon as you turn the *Main rocker switch* (Z) on then the web server, *Power manager* software or the hardware schedule will be able to turn the manageable sockets on and off.
- *Master switch button* (B) (Figure #2) can also switch all the manageable sockets on and off regardless of their current status or schedule that is being executed. To switch them on you should keep the button pressed for 1-2 seconds. To switch them off you should keep the button pressed for more than 3 seconds.
- To protect the connected devices from possible high current and short circuit EG-PMS-WLAN is equipped with the automatic circuit breaker.
- **NOTE:** If the total power consumption (or peak power) of the devices, connected to EG-PMS-WLAN exceeds 2200 Watts, the circuit breaker may power EG-PMS-WLAN off. In this case, please,

remove the excessive load first and then press the *Circuit breaker* button to restore the power supply (Figure #3).

To be able to use EG-PMS-WLAN you will now have to complete its LAN configuration.

3.2. Power Manager software installation

For initial configuring EG-PMS-WLAN it needs to carry out the following:

- Insert the Power Manager CD into a PC CD-ROM drive.
- If for any reason the automatic setup does not work, then open CD-ROM drive in the *My Computer* window and launch SETUP.EXE from the CD
- Follow instructions of the installation software


3.3. Initial WLAN configuration

When the software has been installed, *WLAN Config* utility will be started. It configures EG-PMS-WLAN for connection to the existing WLAN network.

Please, power EG-PMS-WLAN on and connect with USB cable to the computer. Utility shall change status to “Device is found” (Figure #4).

You will need to know the parameters of your WLAN network: network name (SSID), authentication type, password (Network key), and, in case of WEP network, key index. The network shall work in infrastructure mode, i.e. contain at least one Access Point, to which EG-PMS-WLAN will be connected. Input these parameters into corresponding fields in the utility window, then press “Configure” button.

Figure #4



The image shows a software window titled "WLANConfig" with a green border and a red close button in the top right corner. The window has a blue header bar with the "energenie" logo. Below the header, the text reads: "Input Network Name and Authentication settings, then press Configure to connect device to Access Point".

The main area contains two sections:


- Left Section:**
 - SSID:** A text box containing "dlink".
 - Authentication:** A dropdown menu showing "WPA-PSK TKIP".
 - Buttons:** "Configure" and "Close".
- Right Section (Security options):**
 - Network key:** A text box containing "walker78".
 - Key Index:** A dropdown menu.

At the bottom of the window, there is a light blue status bar with the text "Device is found." and a progress bar above it.

Wait until progress bar ends up (Figure #5). If you see pop-up message "Device is configured successfully and connected to Access Point" status it means that connection to the Access Point was successful and now it's time to configure local network settings. Select "Yes" in the pop-up message to try finding EG-PMS-WLAN in the network automatically by utility.

Now disconnect USB cable from EG-PMS-WLAN. Later you will be able to change the WLAN settings via EG-PMS-WLAN web interface, after setting up IP configuration.

Figure #5

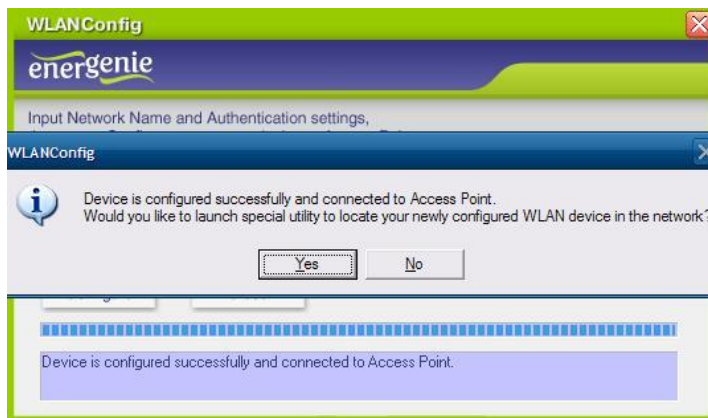

3.4. IP configuration

If the local network has DHCP server (which is very common) then EG-PMS-WLAN will automatically get an IP address from the DHCP server just some seconds after WLAN configuration is completed. Then the device will be found *LAN Find* utility and accessible via it's web interface.

If no DHCP server, other scenario shall be used for accessing the EG-PMS-WLAN. At first, you will need to make procedure of IP configuration reset (it is described in the end of the section) to obtain fixed address 192.168.0.254. And you will need to set temporary IP in the range 192.168.0.1...192.168.0.253 to computer LAN interface. As result, the EG-PMS-WLAN web server will be accessible via any browser on the address 192.168.0.254, and you will be able to change it's IP and other local network settings.

The utility *LAN Find* (Figure #6) will run automatically after successful configuration with *WLAN Config* utility. It can also be started from *Start/All Programs/Gembird/Power Manager*. The IP range where you would like to search for EG-PMS-WLAN will be set automatically according to the IP settings of your LAN adapters but can be changed manually in the *Adapter subnet* fields. Now press the *Search* button.

NOTE: only EG-PMS-WLAN within a local subnet can be found. If your computer LAN adapter is not in the (default) subnet of EG-PMS-WLAN, you will have to change its IP address manually to be able to find EG-PMS-WLAN. For example if you wish to find EG-PMS-WLAN (with the default IP 192.168.0.254), the IP address of your computer should be set as 192.168.0.XXX (where XXX stands for any digit, for example 1) and the subnet mask should be 255.255.255.0.

After the searching the IP addresses of the found EG-PMS-WLAN devices will appear in the list box. Select EG-PMS-WLAN which you want to access, and press the *Open* button (Figure #6).

IP configuration reset procedure:

- Press *Reset* button on the side control panel (Figure #2) with the tip of a pen and wait for about 3 seconds until you hear the sockets switching


The above-mentioned procedure forces EG-PMS-WLAN to reset itself to the default settings (see below):

- IP: 192.168.0.254
- Subnet mask: 255.255.255.0
- Gateway: 192.168.0.1
- DNS:0.0.0.0

- DHCP: enabled
- IP filtering: disabled
- Power Manager client port: 5000

... EG-PMS-WLAN then searches for an IP address from your eventual DHCP server. If no DHCP server is found within 1 minute, EG-PMS-WLAN will then automatically revert to the default settings (see above, with IP: 192.168.0.254).

Figure #6

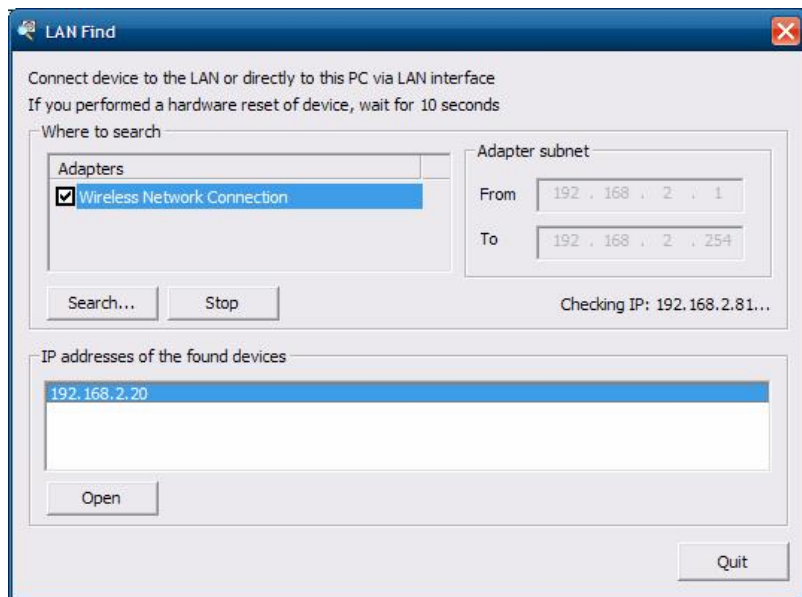

The window of your default internet browser will be then opened to give you access to the built-in web-server. See section 4 for the further details.

4. The web server

Your EG-PMS-WLAN is equipped with a web-server which allows managing the device using any web browser such as Internet Explorer etc.

4.1. Web-server login page

To access the web server of EG-PMS-WLAN, just open Internet Explorer (or other browser) and input the IP address of EG-PMS-WLAN (for example <http://192.168.1.241>). If you have used *Find EG-PMS-WLAN* utility to locate EG-PMS-WLAN then you will be taken to this webpage automatically. *Login* page will then be displayed (Figure #7).

NOTE: Java script must be enabled in your Internet Explorer (or another browser) settings. Otherwise, you get an error message: **WARNING! JAVASCRIPT IS DISABLED!**

Figure #7



EnerGenie Web: Server 1

Password:

The default password is 1. It is recommended to change the password on the *Device settings* page (see section 4.6) after the first login.

After a successful login you will face the *Socket 1 Status* page (see section 4.2).

NOTE: There is a possibility that you might then need to open the *LAN settings* page (see section 4.5) to complete the IP configuration.

4.2. EnerGenie page

With the help of EnerGenie page (Figure #8) you will be able to see the status of all your four manageable sockets, and to switch the sockets on and off manually. The status of your sockets, as well as the buttons to switch them on/off are located at the top of the page.

NOTE: the names of the sockets can be changed from the default Socket1/Socket2/Socket3/Socket4 to something meaningful on the page *Socket Name Settings* (see section 4.4).


The EnerGenie page also allows you to setup access and management (switch on and off) of your EG-PMS-WLAN from anywhere via Internet even if it does not have an external IP address. To setup this free service you should follow two simple steps:

- Register the device. To restrict access to the device via the Internet to the rightful owner only, the device should be registered – e.g. assigned to your account. To register the device, simply push the

button *Register* on this page (Figure #6). You will then be redirected to Login page of EnerGenie.com. If you already own an account at EnerGenie.com then just enter your login and password on this page and you are done. Otherwise, use the *Registration* button on the Login page to create a new account. After your successful login (regardless whether you created a new or used an existing account) your EG-PMS-WLAN is automatically registered.

- Return back to the EnerGenie page of your EG-PMS-WLAN (Figure #6). Push *Activate* button to let the device initiate communication with EnerGenie.com server. The EnerGenie page will then start updating itself until the *Status* becomes *Registered Activated Connected* (Figure #8).

Figure # 8

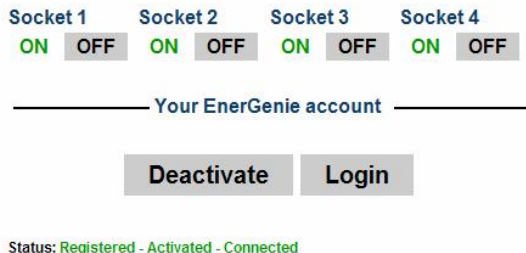

After a successful registration and activation the button *Register* will be renamed to *Login* (and will then open the Login page of EnerGenie.com) and the button *Activate* will turn into *Deactivate*. If by any reason you would eventually decide to stop managing your EG-PMS-WLAN from Internet use then *Deactivate* button to stop communication of the device with EnerGenie.com server.

If you eventually decide to change registration of your EG-PMS-WLAN and assign it to another account, it will be possible via EnerGenie.com website (see section 5).

See section 5 for further details on managing your EG-PMS-WLAN via EnerGenie.com website.


4.3. Socket page

There are 4 manageable sockets on EG-PMS-WLAN and so there are 4 pages corresponding to them. On each status page you can see the socket status (on or off) and you have the *Switch On (Switch Off)* button. Besides you can see the scheduled events for this socket.

The socket number and its eventual name (see section 4.4) are shown at the very top of the page (Figure #9).

Figure #9

Server 1



[EnerGenie](#)

Socket 1

[Socket 2](#)

[Socket 3](#)

[Socket 4](#)

[Socket Name Settings](#)

[Device Settings](#)

[LAN Settings](#)

[Log Out](#)

Socket 1 Socket 1

OFF Switch ON

[Set schedule](#)

Event schedule

Event	Date/Time
OFF	21.07.2011 19:00
ON	22.07.2011 8:00

Loop period: 1 days

Synchronized with NTP: 21.07.2011 17:09:16

21.07.2011 17:20:23

The socket shown on the Figure #9 is currently off, it will be turned on automatically on the 14th of January at 10:15 and on the same day at

18:00 it will be switched off again. The shown two events will be executed periodically, with a loop period of 1 day (e.g. each day).


Below the page you can see the current time of the web-server and eventual information about the last successful timer synchronization. Automatic timer synchronization is used if *Use NTP for timer correction* option is enabled (see section 4.6).

NOTE: If a certain socket has a switching fault, e.g. it should be switched on but the whole device is switched off, or it should be off but it does have voltage, then the warning message *Wrong voltage on socket!* will be shown above the *Event schedule* (Figure #9). This message might also indicate that this socket is defective.

For setting up the socket schedule click *Set schedule* button. You will face then the page shown below (Figure #10).

Figure #10

Server 1



[EnerGenie](#)

[Socket 1](#)

[Socket 2](#)

[Socket 3](#)

[Socket 4](#)

[Socket Name Settings](#)

[Device Settings](#)

[LAN Settings](#)

[Log Out](#)

Socket 1 schedule

	ON/OFF	Day	Month	Year	Start Time	End Time
1	OFF	21	Jul	2011	19	0
2	ON	22	Jul	2011	8	0
3	OFF		Jul	2011	0	0
4	OFF		Jul	2011	0	0
5	OFF		Jul	2011	0	0
6	OFF		Jul	2011	0	0
7	OFF		Jul	2011	0	0
8	OFF		Jul	2011	0	0
9	OFF		Jul	2011	0	0
10	OFF		Jul	2011	0	0
11	OFF		Jul	2011	0	0
12	OFF		Jul	2011	0	0
13	OFF		Jul	2011	0	0
14	OFF		Jul	2011	0	0
15	OFF		Jul	2011	0	0
16	OFF		Jul	2011	0	0

☒ Loop:

Days:
 Hours:
 Minutes:

[Status](#)

Choose the date and time of the scheduled event. If you wish the events to be executed periodically then check the *Loop* option and set the loop period. To commit to your changes press the *Apply* button. To delete the entered schedule press the *Clear schedule* button.

NOTE: The hardware schedule keeps running even when the device is powered off. However it is recommended not to power off the device for extended periods, because the built-in battery has a limited lifespan. If the battery dies the schedule will be completely cleared. The total lifetime of the battery is no less than 2 years if the device is powered off, and no less than 5 years if the device is powered on.

4.4. Socket Name settings page

On the *Socket name settings* page (Figure #11) you can assign an applicable name to your sockets. These names will be shown on *EnerGenie* page (see section 4.2) as well as on the *Socket* pages (see section 4.3).

NOTE: The socket names can not be longer than 11 characters.

HINT: Call your socket by the device which is attached to this socket. For example call Socket 1 – TV set your TV is connected to this socket.

Figure #11




Socket Name Settings

Socket 1	<input type="text" value="Socket 1"/>
Socket 2	<input type="text" value="Socket 2"/>
Socket 3	<input type="text" value="Socket 3"/>
Socket 4	<input type="text" value="Socket 4"/>
	<input type="button" value="Apply"/>

4.5. LAN settings page

Figure #12

Server 1



[EnerGenie](#)

[Socket 1](#)

[Socket 2](#)

[Socket 3](#)

[Socket 4](#)

[Socket Name Settings](#)

[Device Settings](#)

LAN Settings

[Log Out](#)

LAN settings

Obtain IP address automatically (DHCP): ☒

IP address:

Subnet mask:

Gateway:

DNS server:

IP filter: ☐

IP 1:

IP 2:

IP 3:

MAC address:

Power Manager client port:

Network mode:

Wireless Network Name (SSID):

Authentication:

Pass phrase:

[Apply](#)

On the *LAN settings* page (Figure #12) you can set up DHCP, IP address, Subnet mask, Gateway, DNS server and IP filter (up to 3 IP addresses can then be enabled for remote access).

The new settings will be applied immediately after you press the *Apply* button.

IP address, Subnet mask, Gateway, DNS server will be used only if the *DHCP* option is disabled.

If you set *DHCP* option it is recommended for your own convenience to set up your DHCP server so that it always provides the same IP address to EG-PMS-WLAN. To do that you will need to know the MAC address of EG-PMS-WLAN. It can be found on this page or on the bottom sticker of the device. The MAC address is fixed and cannot be changed.

DNS server address is important to be properly set up in case you wish to enable the NTP timer correction option (see section 4.6).

IP filter option is needed to prevent unauthorized access to the server. It restricts the web server access from any computer with IP address different from IP1, IP2 and IP3. Make sure that you input IP1, IP2, and IP3 correctly before enabling this option.

Power Manager client port is used for connecting with the Power Manager software, normally it is not needed to change this setting.

Network mode can be AP mode (device is connected to the Access Point) or Ad-Hoc mode (device might be connected to another WLAN-enabled device in this mode). AP mode is by default.

Wireless Network Name (SSID) is name of network, shall be set manually or via WLAN Configuration utility.

Authentication is depending on the setting of Access Point in AP mode. It can be set from WEP64, WEP128, WPA-TKIP, WPA2-AES. If using WEP64 or WEP128 additionally it needs to choose *Key index* (from 1 to 4, usually 1), which corresponds to that key (pass phrase).

Pass phrase is a password or key, depending on the Authentication type. For WPA-TKIP, WPA2-AES it must be at least 8 characters long.

4.6. Device settings page

On the device settings page you can setup name, password and internal time of EG-PMS-WLAN (Figure #13).

Figure #13

Server 1



[EnerGenie](#)

[Socket 1](#)

[Socket 2](#)

[Socket 3](#)

[Socket 4](#)

[Socket Name Settings](#)

Device Settings

[LAN Settings](#)

[Log Out](#)

Device settings

Server name:

Password:

Set device time: :

Use NTP for timer correction: ☒

NTP server:

[Apply](#)

To be able to setup the schedule of EG-PMS-WLAN you have to first setup its internal clock correctly. Enter the current local time and date.

Alternatively if the option *Use NTP for timer correction* is enabled (by default) then the time will be taken from NTP server. The device will try to connect with the server every 18 hours. The first synchronization would take place in 15 seconds after you press the *Apply* button.

NTP server field should have a valid name of NTP server (by default “pool.ntp.org”). If for any reason the NTP time correction doesn’t work you can choose the best NTP server for your country via the website www.pool.ntp.org.

NOTE: for NTP time correction to work properly the device should have access to the Internet and have a proper DNS server setting (see section 4.5).

Server name can be convenient to identify the web server if you have more than one EG-PMS-WLAN. It is “Server 1” by default.

The password is necessary to access EG-PMS-WLAN both from your web browser and the *Power Manager* software (see section 6). This password is case-sensitive and can be up to 32 characters long. Alphanumeric characters and spaces are allowed to be entered. Only the first eight characters of the password are used to access the device with the *Power Manager* software. You will need to enter this password in the *Add LAN device* window (see section 7).

The *Power Manager* software accesses EG-PMS-WLAN via a certain client port (by default 5000). You can change this port to any other except port 80 which is always occupied by the web server.

Don't forget to push the *Apply* button to save your settings.

4.7. Web-server logout

Having finished working with EG-PMS-WLAN, choose *Log Out* in the main menu. If you don't do this, you will be logged automatically after 10 minutes of inactivity. While you are logged to the web server, it can't be accessed from any other computer. If another user tries to access the web server which is running an active session the error message will be shown on the login page: *Somebody with another IP has already logged in. Try again later.* In the meantime the *Power Manager* software (see section 6) can still access the EG-PMS-WLAN.

5. EnerGenie.com device interface

With your free personal account at EnerGenie.com website you will be able to access your EG-PMS-WLAN from anywhere in the world using any Internet-enabled device (desktop PC, laptop, smartphone etc). See section 4.2 on how to register your EG-PMS-WLAN on the server and setup the connection.

5.1. Logging in

To login into your EnerGenie account just open the webpage www.energenie.com/user in your Internet browser and enter your login and password in the login window (Figure #14).

Figure #14



Check *Remember me* checkbox for automatic login in the future (the website will then save a cookie on your computer). If you lost your password, click *Forgot password* button.

5.2. Device management page

After a successful login you will see the list of your registered devices and their corresponding sockets (Figure # 15).

Figure #15



This page will automatically update itself and will keep showing you the time when your device was last seen online (the latest time when the device communicated with the server) and the status of each socket.

Click your user name to change your account settings.

Click the device to change its name and/or transfer it to another account.

Click the sockets to change their names

Click the On/Off buttons to switch the sockets on or off.

NOTE: the switching command can only be properly executed if the device is switched on, connected to the Internet and activated.

NOTE: the *Last seen online* status information lets you check if the device keeps communicating with the server.

6. *Power Manager* software

The *Power Manager* software is designed to support not only EG-PMS-WLAN but also other power management family products (please visit www.energenie.com) .

6.1. Finding EG-PMS-WLAN

To be able to manage preconfigured EG-PMS-WLANs, please, do the following:


- Install *Power Manager* software on a PC connected to your local network. A socket icon will then appear in your system tray
- With a right mouse click on the socket icon you will get access to the *Power Manager* main menu. Choose *LAN devices* from the menu (Figure #16)

Figure #16



The *LAN devices* window (Figure #17below) will appear, click *Add* button there to add a new EG-PMS-WLAN device.

Figure #17

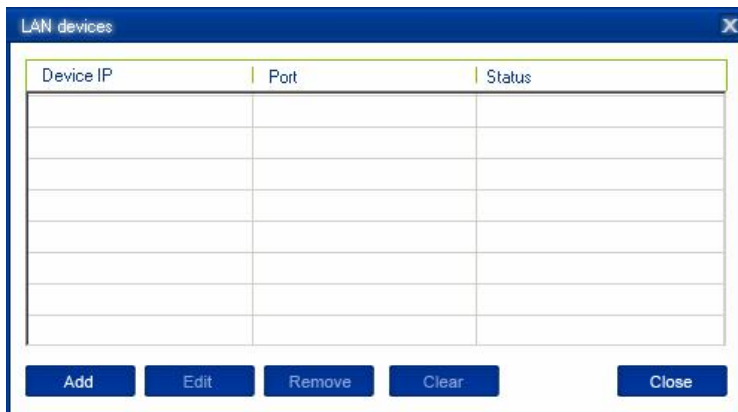

Device IP	Port	Status

Add Edit Remove Clear Close

In the *Add LAN device* window (Figure #16) please, enter correct IP address, port number (5000 by default) and password (1 by default) as configured on the *Device settings* page (see section 4.6) of the web server. To disconnect from the device uncheck the option *Enable*, set this option again to regain the access. Click *OK* button to return to the *LAN devices* window.

Figure #18




The screenshot shows a window titled "LAN device" with a close button (X) in the top right corner. Inside the window, there is a section labeled "LAN device" with a green border. This section contains three input fields: "Device IP:" with the value "192.168.2.189", "Port:" with the value "5000", and "Password:" with a single character. Below these fields is a checkbox labeled "Enabled" which is checked. At the bottom of the window are two buttons: "OK" and "Cancel".

Specified device should then appear with a green square next to it and *Connected* status in the *LAN devices* window (Figure #19).

NOTE: Antivirus or firewall software may block connection to EG-PMS-WLAN. Please, configure antivirus/firewall to permit connection to the IP address and port of your EG-PMS-WLAN

Figure #19

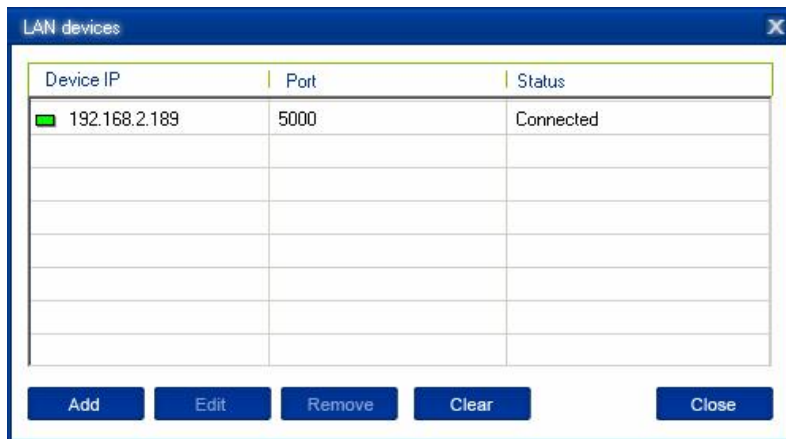

- To edit the LAN device, select it and click the *Edit* button, or just double click on the LAN device
- To remove the LAN device, select it and click the *Remove* button. You can select multiple LAN devices using *Ctrl* and *Shift* keys. You can also remove all LAN devices by clicking the *Clear* button


HINT: Use the popup menu which can be activated by the right mouse button click over the table.

If the status of EG-PMS-WLAN shows the device not to be *Connected* - it could be due to the following reasons:

- Incorrect IP/Port/Password specified in the *Add LAN device* window
- PC is not connected to the local network
- You are trying to access EG-PMS-WLAN from the PC which is not allowed to do so. Change PC IP address or change *IP filter* list in EG-PMS-WLAN hardware settings (see section 4.5)
- EG-PMS-WLAN is not connected to local network. To check if EG-PMS-WLAN is on your local network you can do so-called ping test:
 - Go to *Start->Run*
 - Type *cmd*
 - Type *ping <EG-PMS-WLAN IP Address specified in utility>* in the window which would appear

Suppose EG-PMS-WLAN with IP address 192.168.2.189 is connected to the local network. Then the *cmd* window will look as shown on the Figure #20:

Figure #20

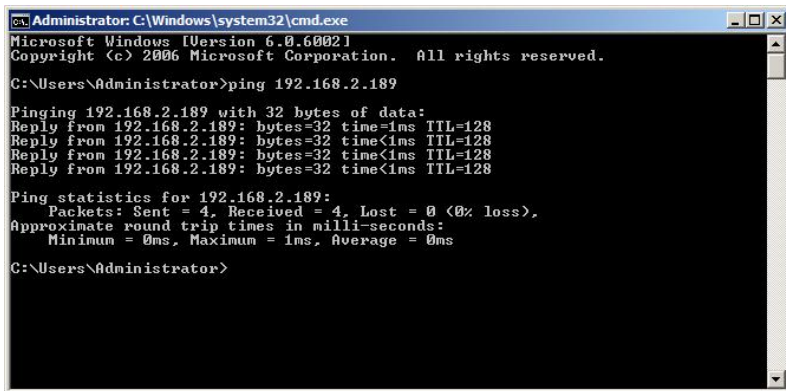

```

C:\Administrator: C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.0.6002]
Copyright (c) 2006 Microsoft Corporation. All rights reserved.

C:\Users\Administrator>ping 192.168.2.189

Pinging 192.168.2.189 with 32 bytes of data:
Reply from 192.168.2.189: bytes=32 time<1ms TTL=128
Reply from 192.168.2.189: bytes=32 time<1ms TTL=128
Reply from 192.168.2.189: bytes=32 time<1ms TTL=128
Reply from 192.168.2.189: bytes=32 time<1ms TTL=128

Ping statistics for 192.168.2.189:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 1ms, Average = 0ms

C:\Users\Administrator>
  
```

- EG-PMS-WLAN is connected to local network (ping test is ok) but not responding. Reset EG-PMS-WLAN by pressing the *Reset button* (A) on the side control panel (Figure #2) or switch it off and then on again (Figure #1)

NOTE: The *Reset button A* (Figure #2) can sometimes help if EG-PMS-WLAN can't be accessed or works abnormally. The device will then be restarted. All the IP settings and device settings will remain the same as before, but the server time will be reset and all schedules will become outdated.

6.2. Managing EG-PMS-WLAN


After successful connection, close *LAN devices* window. You can now start managing EG-PMS-WLAN via the Power Manager interface. Double click on the socket icon in the system tray or select Open from the popup menu (Figure #16). You will get the window of the main control panel shown on the Figure #21:

Figure #21



Sockets should switch on and off (green color means the socket is switched on; red color means the socket is switched off) when you double click on them. Click the *Settings* button for each socket to access the *Settings dialog box* (Figure #22).

Figure #22

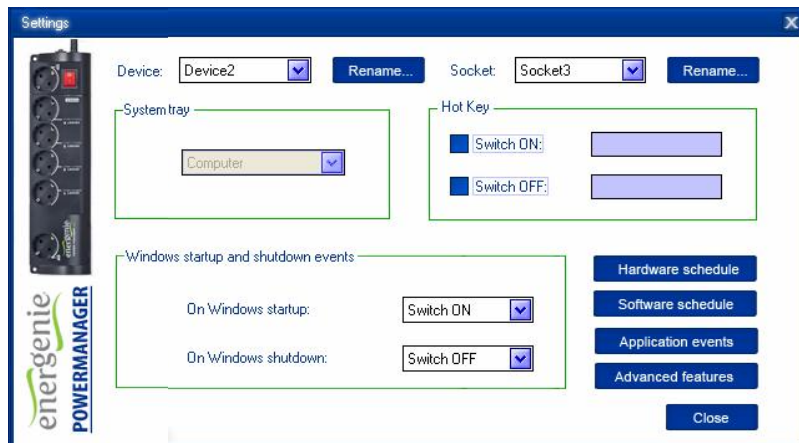

You can choose a different device and another socket from the *Device* and *Socket* drop down list-boxes.

- It is possible to give a name to the device and socket (for example *Printer* or *Scanner*) using the *Rename* button
- Check the *System tray* checkbox if you want to put the icon of the socket into the system tray. You can choose the icon from drop down list box. Such icon is a fast way to switch the device connected to the socket on/off or check the device status
- You can also assign a hot key to switch the socket on/off. Check the *Switch ON* and *Switch OFF* checkboxes and specify the hot keys
- To switch the socket on/off on Windows startup (wake up), check the *On Windows startup* checkbox and choose the required action
- To switch the socket on/off on the Windows shutdown (sleep), check the *On Windows shutdown* checkbox and choose the required action

- The window *Add entry* will appear (Figure #24). In the dialog box, specify the required time and the action

Figure #24




- To edit the record, select it and click the *Edit* button or just double click on the entry (Figure #23). The window *Edit entry* will appear (Figure #25)

Figure #25



- To remove the record, select it and click the *Remove* button (Figure #23). You can select multiple entries using *Ctrl* and *Shift* keys. You can also remove all entries from the schedule by clicking the *Clear* button (Figure #23)
- To repeat your event (for example if you want to perform the same events every day) use the *Loop* button (Figure #23) and specify the loop time period in the *Edit loop period* window (Figure #26)

Figure #26

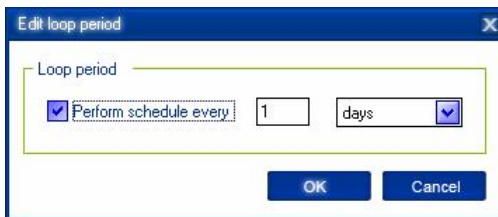

- After the schedule record has been created, click the *Apply* button (Figure #23) to save the hardware timer schedule changes. In case of incorrect entries, these will be highlighted and an error message will appear. Click the *Apply* button again after correcting all the errors
- Use *Sync* button (Figure #23) to synchronize device timer with PC clock. Note that after synchronization past entries will be removed from the schedule

HINT: Use the popup menu (Figure #23) which can be activated by the right mouse button click over the table.

The following are the rules for creating a correct schedule:

- The new event time should be in the future
- There can not be a duplicate entry
- The total quantity of events can not exceed 16 per socket
- The total quantity of events also depends on the total execution period of the schedule
- The interval between the present and the last entry can not exceed 180 days
- Without loop the total execution period of the schedule can not exceed 215 days
- Loop period can not exceed 180 days

NOTES: The hardware schedule keeps running even when the device is powered off. However it is recommended not to power off the device for extended periods, because the built-in battery has a limited lifespan. If the battery dies the schedule will be completely cleared. The total lifetime of the battery is no less than 2 years if the device is powered off, and no less than 5 years if the device is powered on.

If the hardware schedule has been set as set in the Power Manager software, it executes and is displayed according to computer's clock, not EG-PMS-WLAN's clock. To avoid this mismatch, before setting the schedule in software, make sure, that time on computer matches the time on EG-PMS-WLAN.


Using the *Software schedule* button available from the Settings window (see section 6.2) you can create the software timer schedule (Figure #27).

Figure #27

57

- To add a new task, click the *Add* button. The *Add task* window will appear (Figure #28)

Figure #28

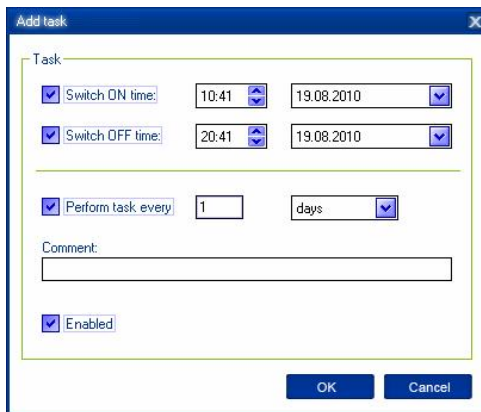


In the *Add task* window, check *Switch ON time* and/or *Switch OFF time* checkboxes and specify the time to switch the socket on and/or off. If you want the same event to be performed periodically, check *Perform task every* checkbox and specify the time interval. You can also add remarks about the task in the *Comment* field. To disable the task,

uncheck the *Enabled* checkbox and to enable the task again, re-check the checkbox.

- To edit the task, select it (Figure #27) and click the *Edit* button or just double click on the task. The *Edit task* window will appear (Figure #29)

Figure #29

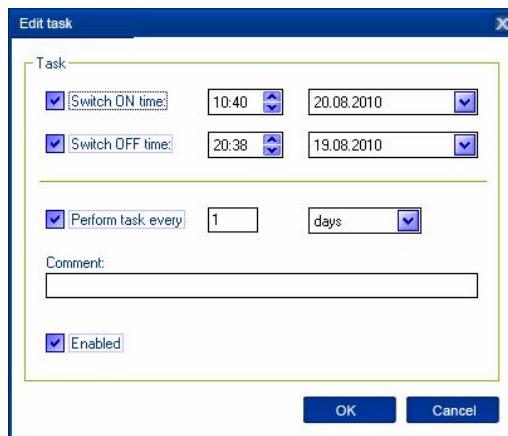

Edit task

Task

☒ Switch ON time: 10:40 20.08.2010

☒ Switch OFF time: 20:38 19.08.2010

☒ Perform task every: 1 days

Comment:

☒ Enabled

OK Cancel

- To remove the task select it and click the *Remove* button (Figure #27). You may select multiple tasks using *Ctrl* and *Shift* keys. You can also remove all tasks by clicking the *Clear* button


HINT: Use the popup menu which can be activated by the right mouse button click over the table (Figure #27).

7.3. Setting up application events

Using the *Application events* window you can specify the socket events when a certain application is launched or closed down. You can also associate switching the sockets off or on with placement and removal of particular files in certain folders.


To use this feature push *Application events* button available from the Settings window (see section 6.2 – Figure #22). You will get the following window (Figure #30).

Figure #30

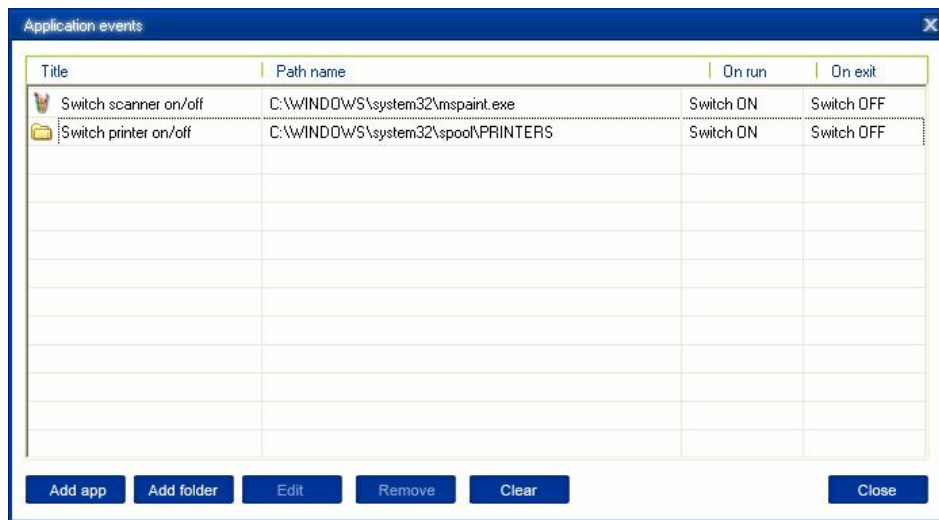

- To add a new program event, click the *Add app* button. The *Add program event* dialog will appear (Figure #31)

Figure #31

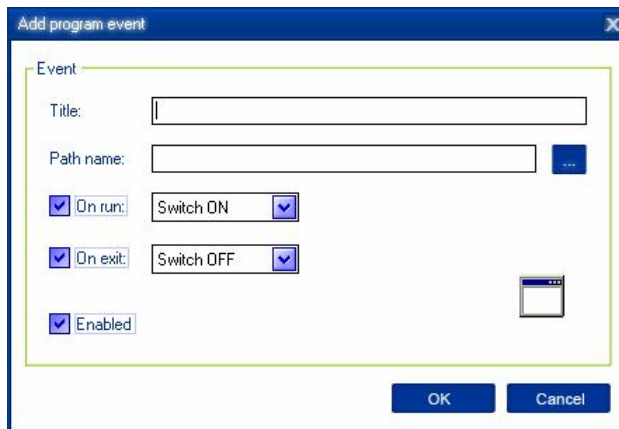


Specify the application title and path to it using the *Browse (...)* button or typing it manually in the *Title* and *Path name* fields. If you use the *Browse (...)* button you can also select a shortcut to the application. In this case the application title and path name will be taken automatically via the shortcut if possible. After you have specified the application, check *On run* and/or *On exit* and choose the event (switch on or off).

NOTE: The *On run* event will take place when the first window of the selected application is opened. The *On exit* event will take place when the last window of the application is closed.

HINT: Your device is an advanced standby-killer. Using this feature you can for example switch your scanner on/off whenever Photoshop is started/closed.

- To add a new file event, click the *Add folder* button (Figure #28). The *Add file event* window will appear (Figure #30)

Figure #32

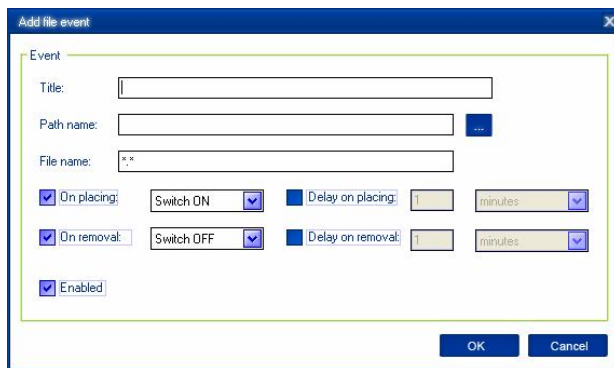

Add file event

Event

Title:

Path name: ...

File name:

☒ On placing:

☒ On removal:

☒ Delay on placing:

☒ Delay on removal:

☒ Enabled

OK Cancel

Specify the path to the folder you would like to monitor using the *Browse (...)* button or typing it manually in the *Path name* field. Specify the *File name* mask using wildcard characters: *, ?. Check then *On placing* and/or *On removal* checkboxes and select the event and delay.


NOTE: The *On placing* event will take place when the first file matching the specified file name mask is placed into the specified folder. The *On removal* event will take place when the last file matching the specified file name mask is removed from the specified folder.

HINT: Your device is an advanced standby-killer. Use the *Add folder* button to assign `c:\system32\spool\printers` folder to switch your printer on whenever you start printing and to switch it off again whenever you are ready with printing.

HINT: If you have several printers connected to the same computer, we suggest moving default spool directory of each printer to a separate location.

- To edit the event, select it and click the *Edit* button, or just double click on the event (Figure #30). The *Edit file event* window will appear (Figure #33)

Figure #33

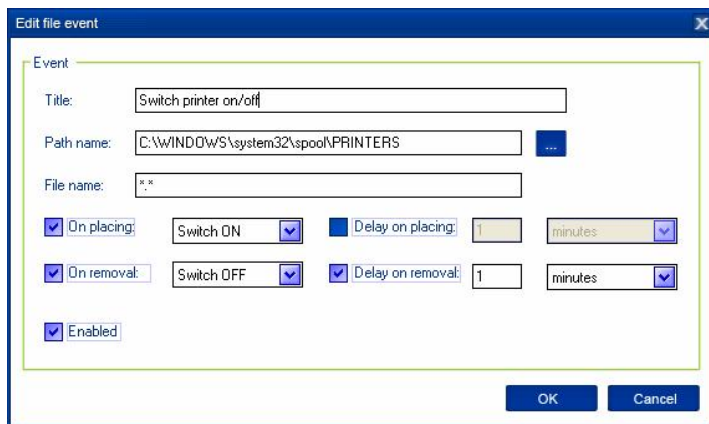

Edit file event

Event

Title: Switch printer on/off

Path name: C:\WINDOWS\system32\spool\PRINTERS

File name: *.*

☒ On placing: Switch ON Delay on placing: 1 minutes

☒ On removal: Switch OFF Delay on removal: 1 minutes

☒ Enabled

OK Cancel


- To remove the event, select it and click the *Remove* button (Figure #30). You can select multiple events using *Ctrl* and *Shift* keys. You can also remove all events by clicking the *Clear* button

HINT: Use the popup menu which can be activated by the right mouse button click over the table.

8. Power Manager advanced features

The following information is for advanced users which wish to have full access to the advanced features of EG-PMS-WLAN. Click the *Advanced features* button available from the Settings window (see section 6.2). The following window will then appear (Figure #34).

Figure #34

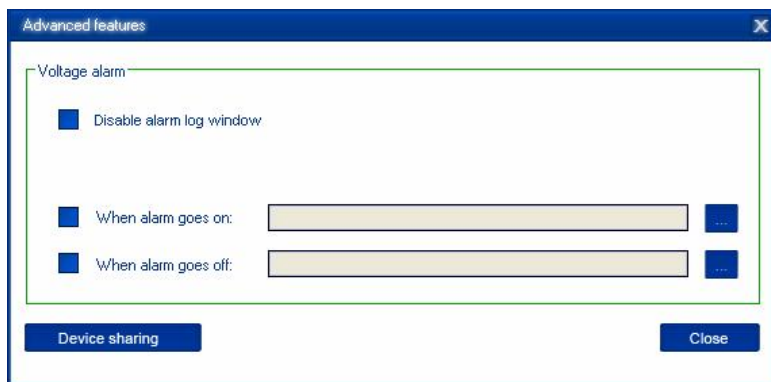


8.1. Processing the alarms

Whenever the actual measured voltage on the manageable socket deviates from the status set by your switching tasks, it is called a *Voltage alarm*.

The *Voltage alarm* can for example be caused by a blackout and will be resolved after power returns. The *Voltage alarm* can also be triggered if for any reason a switching task could not be carried out (switching malfunction).

The default action by an alarm is to record this event into a log file and show a popup *Alarm log* window (Figure #35).

Figure #35

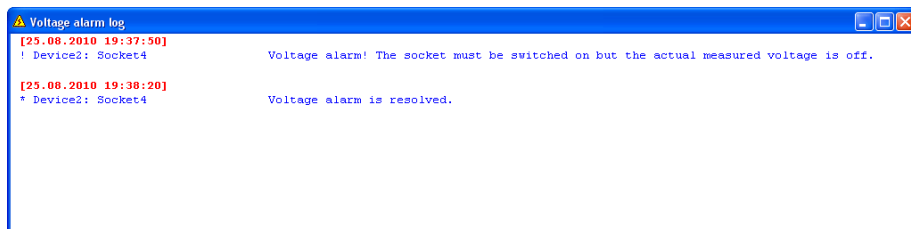

You might wish to process this situation in a different way, e.g. send an email message somewhere etc.

- Check the *Disable alarm log window* checkbox to disable the popup *Alarm log* window (applies to all devices)
- Check the *When alarm goes on* checkbox, then click the *Browse(...)* button to select the desired program to be launched whenever a voltage alarm is triggered
- Check the *When alarm goes off* checkbox, then click the *Browse(...)* button to select the desired program to be launched after the alarm status (Figure #35) is resolved

8.2. Setting up network devices

You don't need to let every user in your local network have direct access to EG-PMS-WLAN via IP address. Instead you can declare EG-PMS-WLAN as a shared device on your server and let the other users access it via the server.

To make EG-PMS-WLAN shared on your server press the button *Device sharing...* in the *Settings* window (Figure #22). The window *Device sharing* will appear (Figure #36)


Figure #36



Set the checkbox *Share this device via network* if you want to enable the network access to the device (via this PC). To prevent unauthorized access to the device enter the access password in the field *Password*. **NOTE:** The port 6100 should be open. Contact your LAN administrator for further details.

To be able to use this shared EG-PMS-WLAN on a client PC choose *Shared devices* from the *Main menu* (Figure #16). You will get the following window (Figure #37).

Figure #37

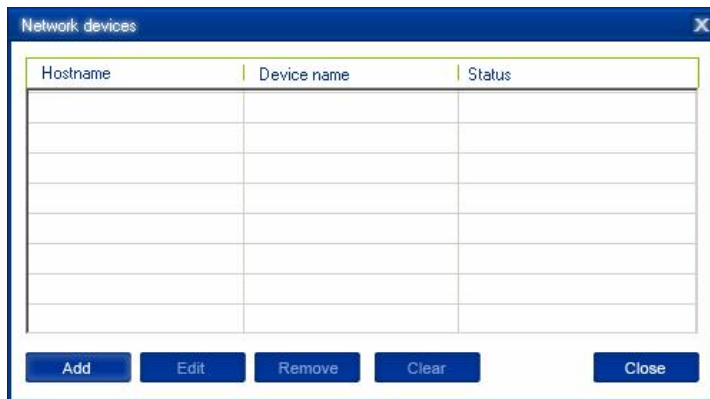


The screenshot shows a window titled "Network devices" with a close button (X) in the top right corner. Inside the window is a table with three columns: "Hostname", "Device name", and "Status". The table has eight rows, all of which are empty. Below the table are five buttons: "Add", "Edit", "Remove", "Clear", and "Close".

Hostname	Device name	Status

Buttons: Add, Edit, Remove, Clear, Close

To add a new remote device, press the *Add* button. You will see the window *Add network device* (Figure #38).

Figure #38

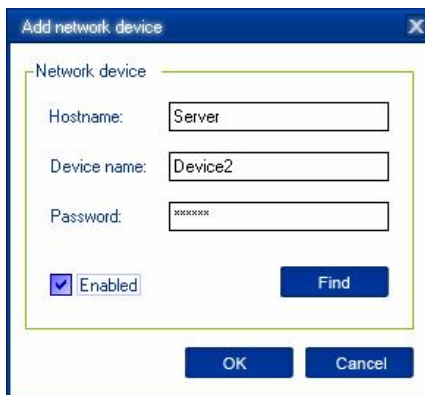


Enter the network name of the server which is connected to EG-PMS-WLAN in the field *Hostname*. Enter the name of the target EG-PMS-WLAN in the field *Device name*. Enter access password in the field *Password*. To disconnect from the device uncheck the option *Enable*, set this option on again to regain the access. To locate the shared device in your local network, click the button *Find*. A dialog box *Find network*

device will appear. Choose the proper server and then the device and click OK button.

To edit the network device, select it and click the *Edit* button, or just double click on the network device (Figure #37). The *Edit network device* window will appear (Figure #39).

Figure #39

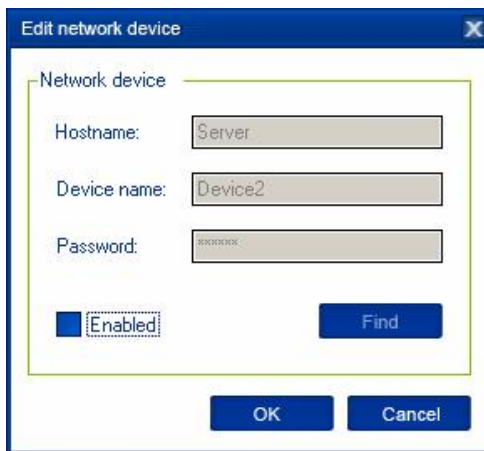

Dialog box titled "Edit network device" with the following fields and controls:

- Network device (label)
- Hostname:
- Device name:
- Password:
- ☒ Enabled
- Find (button)
- OK (button)
- Cancel (button)

- To remove the network device, select it and click the *Remove* button (Figure #37). You can select multiple network devices using *Ctrl* and *Shift* keys. You can also remove all network devices by clicking the *Clear* button

HINT: Use the popup menu which is available with the right mouse button click over the table.

8.3. Managing EG-PMS-WLAN via your own software

To let you switch the sockets from your own applications the following command line interface syntax is supported:

- `pm.exe -[on | off] -device name -socket name`

Examples:

- `"C:\Program Files\Energenie\Power Manager\pm.exe" -on -My EnerGenie -Socket1`
- `"E:\Utils\PM3\pm.exe" -off -My EnerGenie -Table lamp`
- Execute `pm.exe` with `-info` key (`pm.exe -info`) to get the complete information about the status of the current devices.

For each of the connected devices the following information will then be provided and placed into *Info.ini* file in the *Power Manager* folder:

- DeviceName - the user specified device name
 - Socket#name, where # is replaced by a certain socket number - the user specified socket name
 - Socket#SwitchState, where # is replaced by a certain socket number - TRUE, when the socket is switched on, FALSE, when the socket is switched off
 - Socket#VoltageState, where # is replaced by a certain socket number - TRUE, when voltage presence on the socket is detected, FALSE, when there is no voltage on the socket;
- Example:

NOTE: Each use of this command line option totally overrides the data in *Info.ini* file.

NOTE: *Power Manager* should be active.

9. Troubleshooting

Problem	Solution
The circuit breaker is activated (tripped).	The load connected to the device is too high, some of the devices connected to the EG-PMS-WLAN should be disconnected and the circuit breaker should be reset.
The switching command is not carried out, the rocker switch and indicators are not lit.	There is no power supply to the EG-PMS-WLAN. Please, make sure the EG-PMS-WLAN is connected to the power supply and the rocker switch is switched on.
The status of EG-PMS-WLAN in Power Manager does not become <i>Connected</i>	Try to ping the device (see section 6.1)
EG-PMS-WLAN is connected to local network (ping test is ok) but not responding.	Reset EG-PMS-WLAN by pressing the <i>Reset button</i> on the side control panel (Figure #2) or switch it off and then on again using the <i>Main rocker switch Z</i> (Figure #1).
Connection to EG-PMS-WLAN is lost. It seems something is wrong with its IP address.	Make sure EG-PMS-WLAN is connected to LAN and switched on. Launch <i>Find EG-PMS-WLAN</i> utility. You can also try to use <i>IP config (C)</i> button to let the device renew its IP address (see section 3.2)

EC Declaration of Conformity

We hereby certify that the following product complies with all the relevant

Safety Requirements of § 4 EMVG and of the Directives 2006/95/EC; 93/68/EEC and 2004/108/EC.

Applicant :	Gembird Europe BV Wittevrouwen 56, 1358CD, Almere, The Netherlands
Equipment :	Computer parts
Model Nos. :	EG-PMS-LAN
Product description :	EG-PMS-LAN Programmable power outlet strip with LAN interface

European standards:

EN55022:2006; EN55024:1998+A1:2001+A2:2003; EN61000-3-2:2000+
A2:2005; EN61000-3-3:1995+A1:2001+A2:2005;

The following manufacturer/WITHIN Europe is responsible for this declaration:

Gembird Europe BV
Wittevrouwen 56, 1358CD, Almere, The Netherlands
Tel: +31-(0)36-5211588. Fax: +31-(0)36-5347835

Director

The Netherlands / Nov. 25, 2010

Place and Date



Authorized signature

Waste disposal:



Do not deposit this equipment with the household waste. Improper disposal can harm both the environment and human health. For information about waste collection facilities for used electrical and electronic devices, please contact your city council or an authorized company for the disposal of electrical and electronic equipment.

Entsorgungshinweise:



Werfen Sie dieses Gerät nicht in den Hausmüll. Unsachgemäße Entsorgung kann sowohl der Umwelt als auch der menschlichen Gesundheit schaden. Informationen zu Sammelstellen für Altgeräte erhalten Sie bei Ihrer Stadtverwaltung oder einer autorisierten Stelle für die Entsorgung von Elektro- und Elektronikgeräten.

Richtlijnen m.b.t. afvalverwerking



Batterijen en accu's dienen als klein-chemisch afval afgeleverd te worden bij toegewezen afvalverzamelpunten (zie www.afvalgids.nl). U dient ervoor te zorgen dat de batterijen/accu's leeg zijn en dus geen stroom meer kunnen leveren. Let op, de batterijen/accu's dienen onbeschadigd inleverd te worden.

Gooi dit product niet weg in uw vuilnisbak. Dit kan zowel het milieu als de menselijke gezondheid schade toebrengen. Informatie over het inleveren van dit product kunt u inwinnen bij uw gemeentelijke vuilnisdienst of andere geautoriseerde instelling in uw buurt.





Traitement des déchets:



Ne jetez pas cet appareil dans les déchets domestiques. Un traitement inapproprié peut être dommageable à l'environnement et à la santé humain.

Vous trouvez des informations sur les centres de rassemblement des appareils vieux chez l'administration municipale ou

chez un centre autorisé pour le traitement des appareils électriques ou électroniques.

WARRANTY CONDITIONS 	GARANTIE BEDINGUNGEN   
<p>The warranty period is 36 months and begins with the sale to the end user. The receipt must clearly list the date of purchase and the part number, in addition it should be printed. Keep the receipt for the entire warranty period since it is required for all warranty claims. During the warranty period the defective items will be credited, repaired or replaced at the manufacturer's expense. Work carried out under the warranty neither extends the warranty period nor starts a new warranty period. The manufacturer reserves the right to void any warranty claim for damages or defects due to misuse, abuse or external impact (falling down, impact, ingress of water, dust, contamination or break). Wearing parts (e.g. rechargeable batteries) are excluded from the warranty. Upon receipt of the RMA goods, Gembird Europe B.V. reserves the right to choose between replacement of defective goods or issuing a credit note. The credit note amount will always be calculated on the basis of the current market value of the defective products</p>	<p>Die Garantie beträgt 36 Monate ab Verkaufsdatum an den Endverbraucher. Das Kaufdatum und der Gerätetyp sind durch eine maschinell erstellte Kaufquittung zu belegen. Bitte bewahren Sie Ihren Kaufbeleg daher für die Dauer der Garantie auf, da er Voraussetzung für eine eventuelle Reklamation ist. Innerhalb der Garantiezeit werden alle Mängel, wahlweise durch den Hersteller entweder durch Instandsetzung, Austausch mangelhafter Teile oder im Austausch, behoben. Die Ausführung der Garantieleistung bewirkt weder eine Verlängerung noch einen Neubeginn der Garantiezeit.</p> <p>Eine Garantieleistung entfällt für Schäden oder Mängel die durch unsachgemäße Handhabung oder durch äußere Einwirkung (Sturz, Schlag, Wasser, Staub, Verschmutzung oder Bruch) herbeigeführt wurden. Verschleißteile (z.B. Akkus) sind von der Garantie ausgenommen.</p>
<p>Gembird Europe B.V. Wittevrouwen 56, 1358CD Almere The Netherlands www.gembird.nl/support support@gembird.nl Tel. +31-36-5211588 (0900-4362473 inside The Netherlands, € 0,15 p/m, mobile costs not included)</p>	<p>Gembird Deutschland GmbH Overweg 27, 59494 Soest Deutschland www.gembird.de/support support@gembird.de Tel. +49-180 5-436247 0,14 € pro Minute aus dem deutschen Festnetz. Mobilfunkpreise können abweichen</p>

GARANTIE VOORWAARDEN 	CONDITIONS DE GARANTIE 
<p>De garantietermijn bedraagt 36 maanden en gaat in op de aankoopdatum van het product door de eindgebruiker. Op de aankoopbon moeten de aankoopdatum en productomschrijving duidelijk vermeld staan. Gelieve de aankoopbon de gehele garantieperiode te bewaren, deze is ten alle tijden benodigd voor alle garantie aanspraken. Tijdens de garantieperiode zullen alle gebreken verholpen of vervangen worden door de fabrikant d.m.v. reparatie, omruiling van het defecte onderdeel of het gehele apparaat. Aanspraken tijdens de garantieperiode leiden niet tot verlenging hiervan. Garantieaanspraak vervalt bij schade of gebreken die ontstaan zijn door oneigenlijk gebruik, misbruik of invloeden van buitenaf (vallen, stoten, water, stof, vuil of breken). Slijtagegevoelige onderdelen (b.v. batterijen) zijn uitgesloten van garantie. Bij ontvangst van de RMA goederen behoudt Gembird zich het recht om te kiezen tussen vervanging van de defecte waren of het uitgeven van een kreditnota. Het bedrag van de kreditnota zal altijd gecaluleerd zijn op basis van de huidige marktprijs voor het defecte produkt.</p>	<p>Garantie est de 36 mois à partir de la date d'achat de l'utilisateur final. Le talon de garantie doit énumérer clairement la date d'achat et le type d'appareil.</p> <p>Conservez le reçu d'achat pendant toute la durée de la garantie car elle est nécessaire pour toute réclamation.</p> <p>Au cours de la période de garantie tous les défauts doivent être remplacé aux frais du fabricant, soit par la réparation ou la remplacement de la pièce défectueuse ou l'ensemble du produit. Les travaux effectués sous garantie ne prolongent pas la période de garantie ni ne commencent pas une nouvelle période de garantie.</p> <p>Le fabricant se réserve le droit d'annuler toute demande de garantie pour les dommages ou défauts dus à une mauvaise utilisation, abus ou les effets externes (chute, choc, pénétration de l'eau, la poussière, etc.).</p> <p>Les pièces d'usure (par exemple les piles rechargeables) sont exclus de la garantie.</p> <p>Dès réception de la marchandise sous garantie, le SAV de Gembird Europe BV se réserve le droit de choisir entre le remplacement des produits défectueux ou de délivrer un avoir.</p> <p>Le montant d'avoir sera toujours calculée sur la base de la valeur actuelle du marché des produits défectueux.</p>
<p>Gembird Europe B.V. Wittevrouwen 56, 1358CD Almere The Netherlands www.gembird.nl/support support@gembird.nl Tel. 0900-4362473 € 0,15 p/m binnen Nederland Exclusief mobiele telefoonkosten</p>	<p>Gembird Europe B.V. Wittevrouwen 56 1358CD Almere, The Netherlands www.gembird.nl/support support@gembird.nl Tel. +31 (36) 5211588 Prix d'appel depuis telephone fixe Pays-Bas : 0.15 euro / min Prix d'appel depuis telephone mobile / autre pays - selon opérateur</p>

ГАРАНТИЙНЫЙ ТАЛОН 	УМОВИ ГАРАНТИЙНОГО ОБСЛУГОВУВАННЯ 
<p>1. Гарантийное обслуживание предоставляется в течение срока гарантии, при наличии правильно и четко заполненного гарантийного талона, и изделия в полной комплектации. Серийный номер и модель изделия должны соответствовать указанным в гарантийном талоне.</p> <p>2. Гарантийное обслуживание представляет собой бесплатное устранение всех неполадок (ремонт), или замену изделия на новое (аналогичное).</p> <p>3. Гарантия не распространяется на неисправности, вызванные следующими причинами:</p> <ul style="list-style-type: none"> • использование изделия не по назначению. • нарушение условий эксплуатации, хранения или перевозки изделия, которые указаны в настоящей инструкции. • подключение нестандартных или неисправных периферийных устройств, аксессуаров. • механические повреждения, попадание внутрь изделия посторонних предметов, веществ, жидкостей, насекомых. • ремонт изделия не уполномоченными на то лицами. <p>4. Комплектность и внешний вид изделия проверяются Покупателем при получении товара в присутствии персонала фирмы.</p> <p>Послепродажные претензии по укомплектованности и внешнему виду не принимаются.</p> <p>Наименование изделия: _____</p> <p>Модель _____</p> <p>Серийный номер _____</p> <p>Срок гарантии _____</p> <p>Дата продажи («__» _____ 20__ года</p> <p>Фирма-продавец: _____</p> <p>Адрес и телефон фирмы-продавца: _____</p> <p>М.П. С условиями гарантии ознакомлен и согласен: _____</p> <p>Продавец: _____ Покупатель: _____</p>	<p>1. Гарантієне обслуговування надається протягом терміну гарантії, при наявності Гарантійного талону, заповненого належним чином, та виробу в повній комплектації.</p> <p>2. Гарантієне обслуговування не підтримується в разі порушення правил експлуатації, зберігання або перевезення виробу, що зазначені в інструкції по експлуатації виробу.</p> <p>3. Гарантієне обслуговування скасовується у випадках:</p> <ul style="list-style-type: none"> - наявності механічних пошкоджень або слідів стороннього втручання; - пошкодження викликані стихійним лихом або нещасним випадком, включаючи й блискавку, потраплянням у виріб сторонніх предметів, рідин, комах, тощо; - пошкодження викликані застосуванням або підключенням нестандартних або несправних периферійних пристроїв, аксесуарів; <p>4. Гарантія не поширюється на витратні матеріали та додаткові аксесуари;</p> <p>3 гарантійними умовами згоден.</p> <p>Підпис покупця: _____</p> <p>ГАРАНТІЙНИЙ ТАЛОН № _____</p> <p>Товар/модель _____</p> <p>Серійний номер _____</p> <p>Термін гарантії _____</p> <p>Дата продажу _____</p> <p>Продавець (назва, телефон) _____</p> <p>Печатка та підпис продавця _____</p> <p>3 гарантійних питань звертайтеся до сервісних центрів Gembird. Про адреси та контакти Ви можете дізнатись на сайті www.gembird.ua або по телефону 044-4510213.</p>